


Installation Guide Touch Pro




1

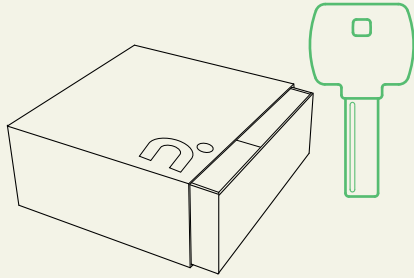


Review the contents of the box and find the emergency keys. Make sure you **always** have the emergency keys available during installation. Test the keys in the keyhole on the outdoor unit.

2

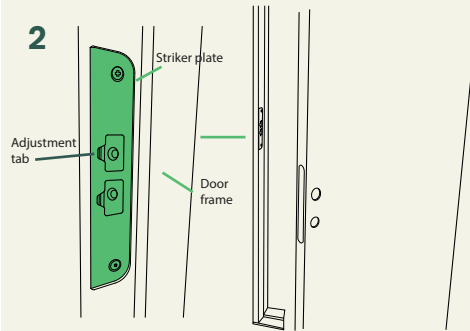


Mount the **striker plate** in your door frame, using the existing screws. If needed, you may readjust the adjustment tabs **after** the installation.

3

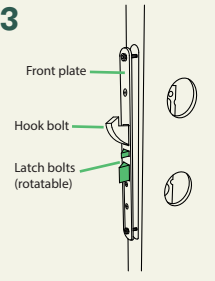


Verify that the **latch bolts** are set in the correct direction with the inclined side **towards** the doorframe. If necessary, remove the **front plate** and rotate the latch bolts. Mount the mortise in your door, using the existing screws.

4

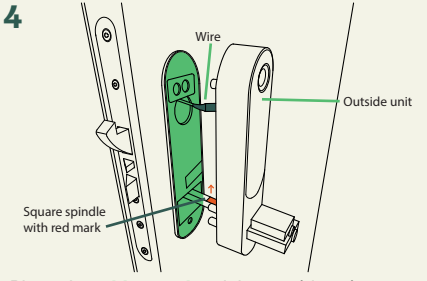


Place the **rubber seal** and the outside unit on the door. Make sure that the recessed area of the gasket is mounted towards the back of the lock. The red mark on the square spindle **must point up**. Pass the **wire** through the top.

5

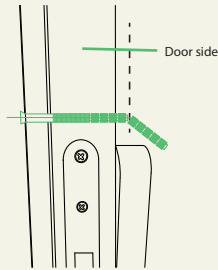


Adjust the **cuttable screws** so that they correspond to the thickness of the door and **add** an extra threaded portion. Use powerful pliers to cut to the desired length. The length should be equal on all screws. Cut further if necessary.

6

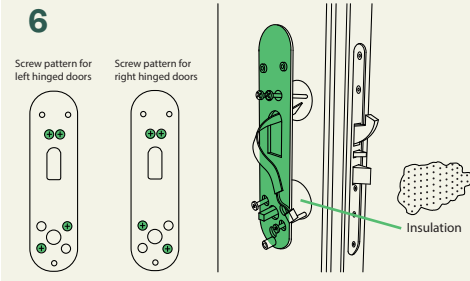

Locate the screw holes from the inside. Place the supplied insulation in both door holes. Mount the **inside bracket** with the cuttable screws. Tighten carefully. **Two screws at the top and two at the bottom.**


7

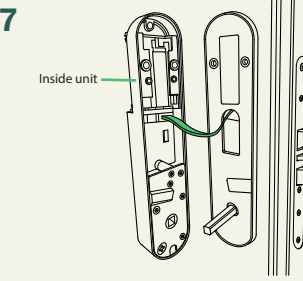

Place the rubber seal on the inner bracket and connect the **cab**le to the inside unit. Make sure that the seal covers the **entire** bracket.


Optional: **Did you purchase nimby Connect Module?** Install the module before proceeding.

8

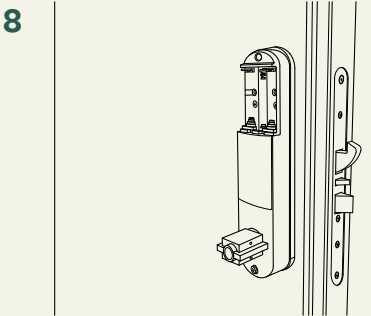


Insert the excess cord into the door to prevent it from getting caught. Slide the inside unit carefully into place and ensure that the gasket seals evenly around the inner unit.

9

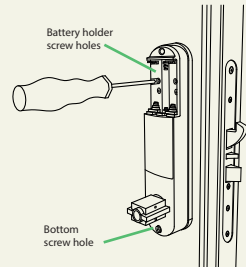

Fit the inside of the lock by fastening both the **short** security screws in the battery holder and the **longest** security screw at the bottom of the unit. Use the included screw bits and tighten carefully. Install all batteries and the battery cover. Store the included bits a safe place.

10

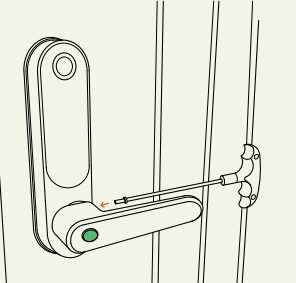


Mount both handles. The **exterior door handle** has a hole for the key cylinder. Place the handles in the desired direction and use the supplied tool to fasten the screws.

11



Make sure the lock works with your **emergency keys before** closing the door. **Remove** the key and store one or more of these safely outside your home. Test the lock electronically with factory code 123 #.

12

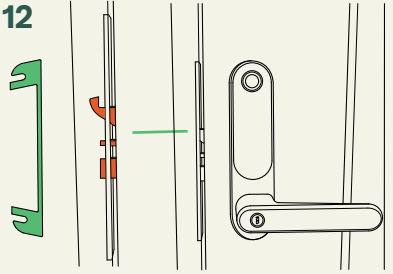

Close the door and verify that the **hook bolt** extends upon closure. If the gap between the door frame and door becomes too large, you can use the included **spacer** behind the strike plate.

Programming Guide Touch Pro

All programming sequences are entered on the outside unit.

For Class 3 SSF 3522
compliance, see our online
Installation Manual



ADVICE!
WRITE DOWN WHICH USER IS
ALLOCATED TO WHAT USER SLOT



Did you purchase **Connect Module**
& **Gateway**?

Install the module according to its own
instructions and carry out the
programming by using the application.

Otherwise, continue with the next step
to continue with manual programming.



Create user code – used for access only.

User codes can be added to user slots from 003
to 999. All codes can contain up to 8 digits.
Minimum 4 digits to fulfill lock class 3
requirements.

Enter: * User slot Master code * new user code
* new user code *

Example: * 003 345678 * 2323 * 2323 *



Add first master finger – used for access
and programming.

The first master finger is automatically
assigned user location 000.

For 001 or 002, see the advanced manual.

Press # # # and place your finger on the fingerprint
reader, lift your finger off at the first beep, place
your finger back, lift off at another beep and place
your finger back again.



Create master code – used for access and programming.

User slot 000, 001 and 002 are reserved for the master code(s). Only
one is mandatory. The factory code is 123. All codes can contain up to
8 digits, we recommend **at least 6** for improved security. **Minimum 4**
digits to fulfill lock class 3 requirements.

Enter: * User slot Master code * new master code * new master code *
Example: * 000 123 * 345678 * 345678 *



Add key tag – used for access only.

Key tags can be added to user slots 000 to 999.

Enter: #8 User slot Master code # place key tag on the
panel.


Example: #8 000 345678 # place key tag on the panel.



Add first user finger – used for access only.

User fingers can be added to user slots 003 to 199.

Enter # # # and place your **master finger** on the
fingerprint reader. Enter a user location between 003 -
199 and *, place the new **user finger** on the reader, lift off
the finger at the first beep, place the finger back, lift it off
at the second beep and place the finger back again.

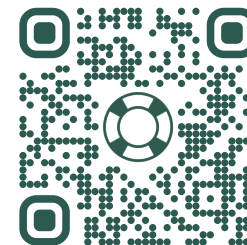

Do you need a more detailed
manual, assistance from
customer support or more
information?

Scan the QR code or visit
us at www.nimly.io

